

# Filling a Boca Printer With Paper

**NOTE:** All Boca printers are shipped with a screw holding the cover on. Remove this screw before proceeding.

The Boca printers used by AMHS have two paper channels. The larger size paper goes in the channel closest to the display. The smaller paper goes in the channel farthest from the display. You will need to adjust the guides to fit the paper.



Twist the cover release counter clockwise to unlock and lift the cover off.

**NOTE:** New printers will contain a power cable and the paper trays inside.



The logo goes on the bottom. Each type of paper has timing marks on the bottom as well.

On the larger stock the timing marks go forward.

On the smaller stock the thin timing mark goes forward.

